



# INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS

1455 Kleppe Lane ♦ Sparks, NV 89431-6467 ♦ (775) 359-4712 ♦ Fax (775) 359-7424  
E-mail: [haws@hawsco.com](mailto:haws@hawsco.com) ♦ website: [www.hawsco.com](http://www.hawsco.com)

No. 2080063(8)

## Model 7611 Eye/Face Wash

**NOTE TO INSTALLER: Please leave this information with the Maintenance Department.**

### LIMITED WARRANTY

HAWS warrants that this specific product is guaranteed against defective material or poor workmanship for a period of **one year from date of shipment**. HAWS liability under this warranty shall be discharged by furnishing without charge F.O.B. HAWS Factory any goods, or part thereof, which shall appear to the Company upon inspection to be of defective material or not of first class workmanship, provided that claim is made in writing to Haws within a reasonable period after receipt of the product. Where claims for defects are made, the defective part or parts shall be delivered to the Company, prepaid, for inspection. HAWS will not be liable for the cost of repairs, alterations or replacements, or for any expense connected therewith made by the owner or his agents, except upon written authority from HAWS, Sparks, Nevada. HAWS will not be liable for any damages caused by defective materials or poor workmanship, except for replacements, as provided above. Buyer agrees that Haws has made no other warranties either expressed or implied in addition to those above stated, except that of title with respect to any of the products or equipment sold hereunder and that HAWS shall not be liable for general, special, or consequential damages claimed to arise under the contract of sale.

The emergency equipment manufactured by HAWS is warranted to function if installation and maintenance instructions provided are adhered to. The units also must be used for the purpose for which they were intended. This product is intended to supplement first-aid treatment. Due to widely varying conditions, Haws cannot guarantee that the use of this emergency equipment will prevent serious injury or the aggravation of existing or prior injuries.

**NO OTHER WARRANTIES EXPRESSED OR IMPLIED ARE AUTHORIZED, PROVIDED OR GIVEN BY HAWS.**

**SHOULD YOU EXPERIENCE DIFFICULTY WITH THE INSTALLATION OF THIS MODEL PLEASE CALL:**

**TECHNICAL SUPPORT: 1-800-766-5612**

**FOR CUSTOMER SERVICE: 1-888-640-4297**

**LOCATION OF UNIT:** The Model 7611 Eye/Face Wash should be installed in close proximity to potential accident areas. It should be clearly identified free from obstructions and easy to access.

**SUPPLY LINE:** The minimum recommended line size is 1/2" IPS with 30-90 psi (2-6 ATM) flowing line pressure. Where sediment or mineral content is a problem, an inlet filter is recommended.

**PLUMBING CONNECTIONS:** Inlet supply is 1/2" O.D. slip joint.

<b>TROUBLESHOOTING</b>	
<b>PROBLEM</b>	<b>REPAIR CHECKLIST</b>
1. No flow.	1. Check the main shut-off valve.
2. Insufficient water flow.	2. a. Verify minimum 30 psi flowing supply line pressure. b. Probable clogging of flow control due to inadequate line flushing. Unscrew eye/face wash head and remove the four screws to disassemble head. Clean flow control and reassemble head.
3. Eye/face wash stream does not meet desired eye level.	3. a. Possible blocked flow control, see above solution. b. Possible non-leveled eye/face wash assembly.

## **INSTALLATION INSTRUCTIONS**

Refer to installation drawing to clarify installation procedure.

**Note:** Model 7611 Eye/Face Wash can be mounted on either right or left side of the sink. For left hand use, reconfigure as shown on installation drawing.

**STEP 1:** Remove the 3" O.D. flange from valve body.

**STEP 2:** Remove the protective backing from rubber washer.

**STEP 3:** After making sure that bottom surface of the counter top or deck, around the drilled hole is clean and free of grease, slide valve through drilled hole from the bottom.






**STEP 4:** Place sign over valve.

**STEP 5:** Reinstall the 3" O.D. flange, ensure that the top surface of flange is flush with valve. Wrench tighten locknut against base of counter or deck.


**STEP 6:** Install eye/face wash assembly to valve and after checking for proper alignment, tighten the setscrew on the cap.


ITEM	DESCRIPTION	PART NO.
1	E/F WASH AXION	SP65PD
2	VALVE ASSEMBLY	-
3	SWING AWAY SIGN	0005240025
4	EYEWASH SIGN	SP175
5	TEST TAG	SP170
-	REPAIR KIT	VRK7650

# PARTS BREAKDOWN

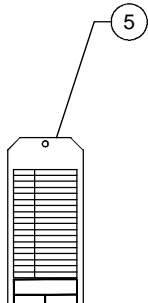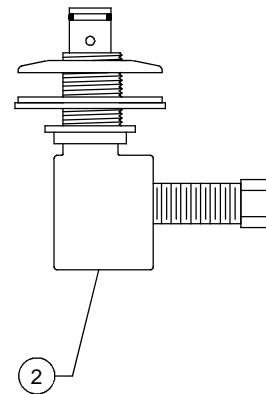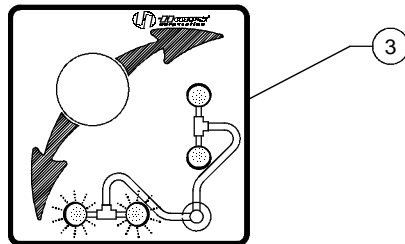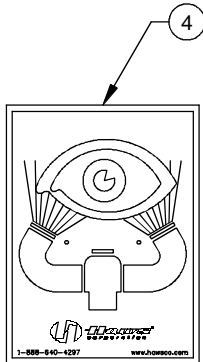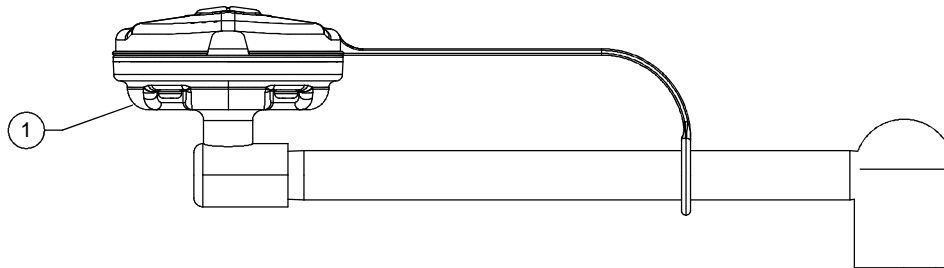



WHEN ORDERING PARTS PLEASE SPECIFY MODEL NUMBER.

 <b>Haws</b> <sup>®</sup>		1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWS.CO.COM WEBSITE: WWW.HAWS.CO.COM	
		ECN NO. REVISED PER BY ECN: 5005 HM	MODEL(S) 7611 DECK MTD SWING AWAY E/W
DRAWN STH APPROVED FV	DATE 10/21/96 DATE 06/25/15	CHKD RVH	REVISION 8
SCALE: 1:1		DRAWING TYPE: PARTS BREAKDOWN	SIZE: A SHEET 1 OF 1

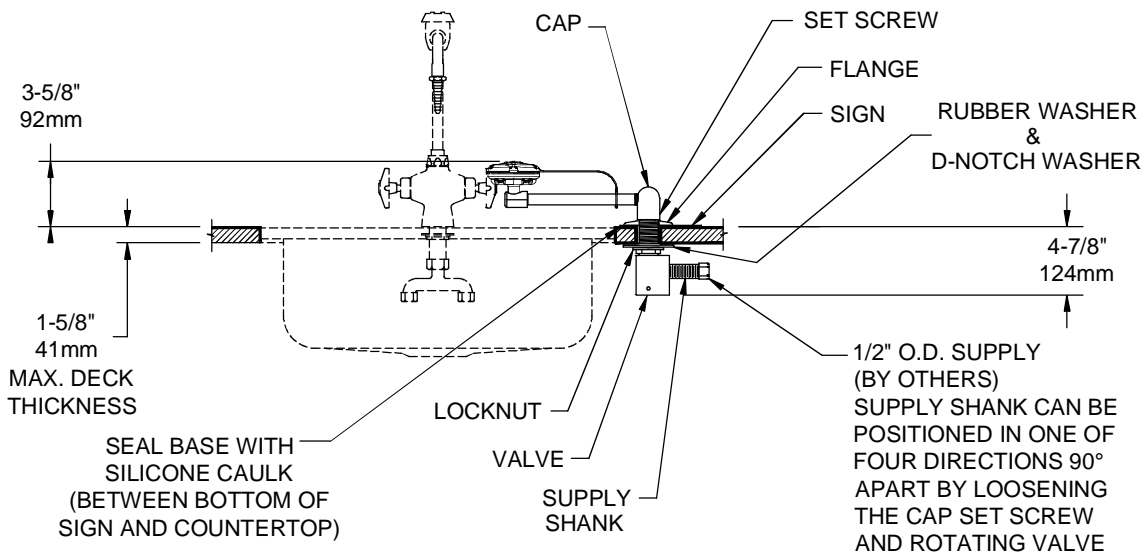


**NOTES:**

1. THE ANSI Z358.1-2009 STANDARD SPECIFIES EYEWASH NOZZLE HEIGHTS TO BE 83.8cm (33 IN.) TO 114.3cm (45 IN.) ABOVE THE FLOOR AND 15.2cm (6 IN.) MINIMUM FROM WALL OR NEAREST OBSTRUCTION.
2. INSTALL SO THAT EYEWASH HEAD IS OVER SINK WHEN ACTIVATED.
3. DRILL ONE Ø1-3/8" [35mm] HOLE WHERE UNIT IS TO BE INSTALLED.
4. THESE DIMENSIONS MAY VARY ±1/2" [6.4mm].

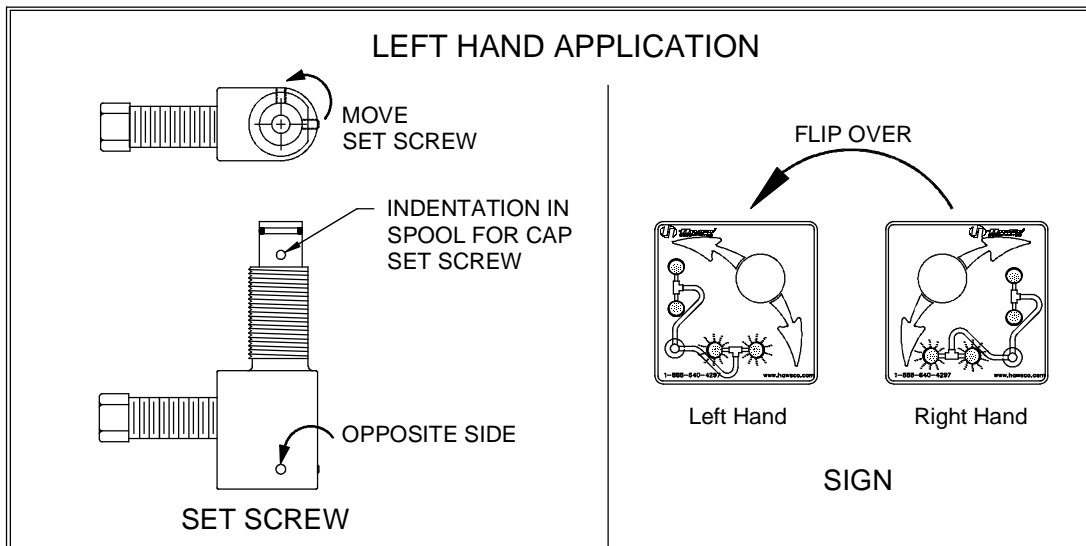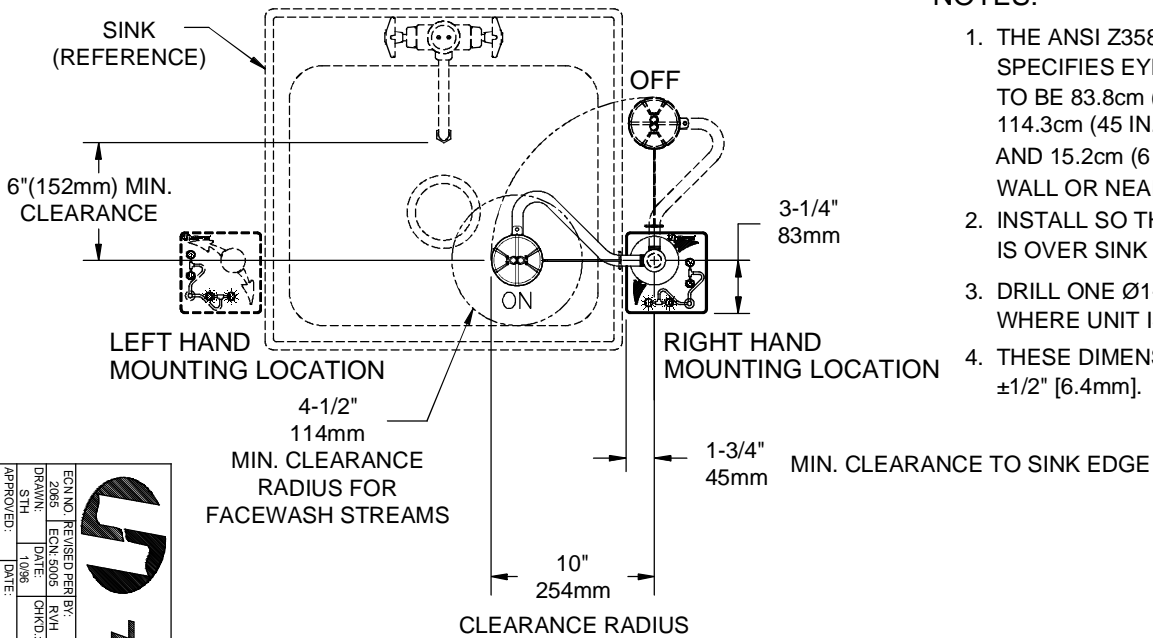

<b>Haws</b>		1455 KLEPPE LANE SPARKS, NEVADA, 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWS.CO.COM WEBSITE: WWW.HAWS.CO.COM	
ECON NO. REVISED PER BY:	MODEL(S)	PART NUMBER	
2005 ECON 5005 R.V.H.	7611	0002080063.D	
DATE: 10/08	CHKD:	DRAWING NO.	REV
DATE: 06/29/15	SCALE: 1:1	12621A00	8
APPROVED: F.V.	DRAWING TYPE: INSTALLATION	SHEET 1 OF 2	
DECK MTD SWING AWAY EW			

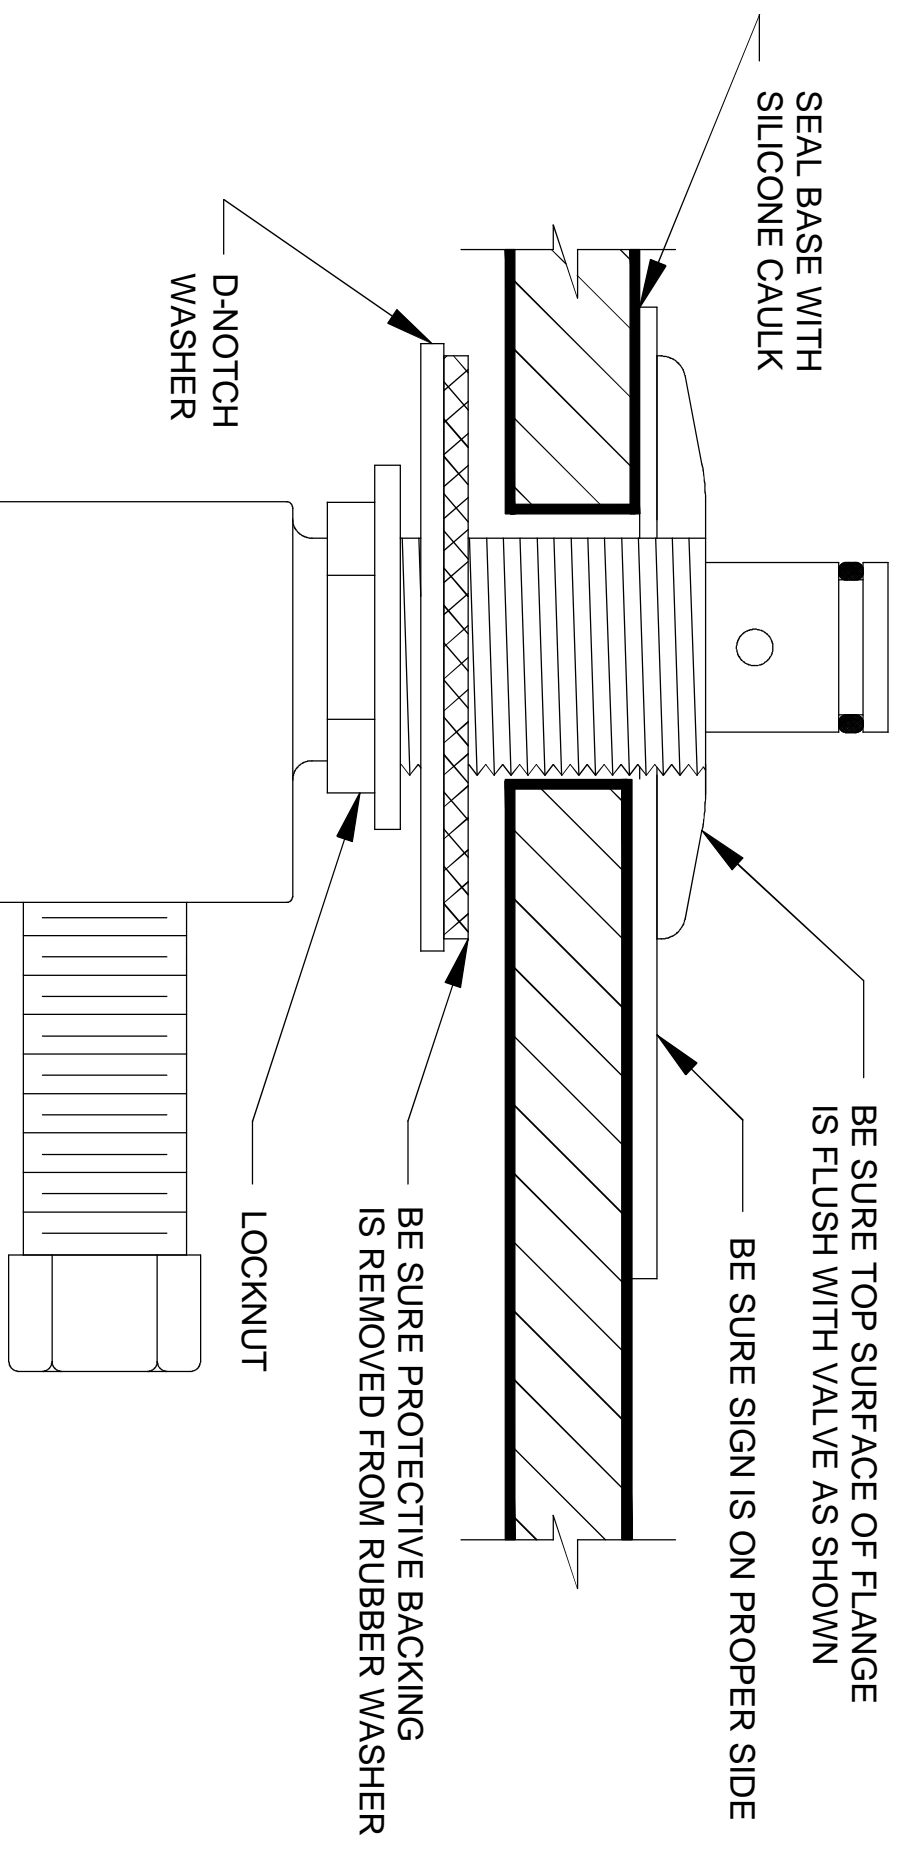

**Haws**<sup>®</sup>

1455 KLEPPE LANE  
 SPARKS, NEVADA, 89431  
 (775) 359-4712 FAX (775) 359-7424  
 E-MAIL: HAWS@HAWSCO.COM  
 WEBSITE: WWW.HAWSCO.COM

ECN NO.	REVISED PER BY:	MODEL(S)	PART NUMBER
0002080063.D	HM	7611	0002080063.D
DATE:	CHK'D:	SCALE:	REVISION
10/26/15	RMH	1:1	8
APPROVED:	DATE:	SCALE:	REVISION
[Signature]	10/26/15	1:1	8
FM	09/25/15	DRAWING TYPE:	SHEET 2 OF 2
		DECK MTD SWING AWAY EW	
		INSTALLATION	